



Outperform every day.™

# Installation Instructions

## Mirage® Drop-in Induction Warmer/Rethernalizer Stainless Steel Ring

Item Number(s): 47491, 47492

### Purpose

This document explains the procedure for adhering the accessory stainless steel ring to the rim of the Mirage Drop-in Induction Warmer/Rethernalizer. Adhere the ring after the drop-in has been installed per the Operator's Manual.

**NOTICE: The gasket must be installed before using the stainless steel ring. The ring will not fit properly without the gasket.**


### What you will need:

- 100% silicone or room temperature vulcanization (RTV) silicone sealant
- a soft cloth

1. Turn the ring upside down.
2. Apply a bead of silicone sealant to the outer wall of the ring.




3. Apply a bead of silicone sealant to the inner wall of the ring.

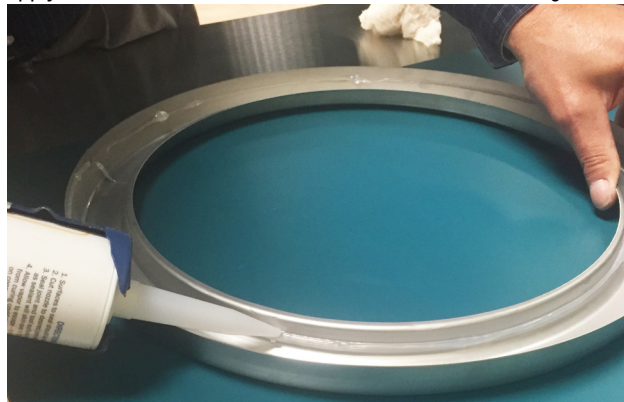

4. Turn the ring right side up and press it onto the rim of the drop-in until it is firmly seated.



5. Use a soft cloth to remove any excess sealant.
6. Apply a thin bead of silicone sealant to the area between the ring and rim of the drop-in.

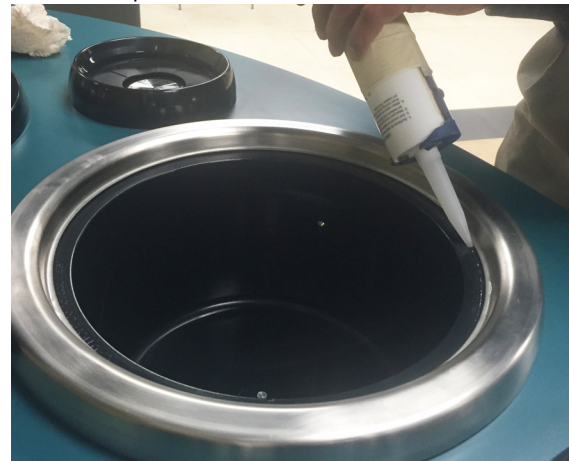

7. Allow the sealant to cure per the sealant manufacturer's instruction before using the drop-in.



Outperform every day.™

www.vollrath.com

### The Vollrath Company, L.L.C.

1236 North 18th Street  
Sheboygan, WI 53081-3201 U.S.A.  
Main Tel: 800.624.2051 or 920.457.4851  
Main Fax: 800.752.5620 or 920.459.6573  
Customer Service: 800.628.0830  
Canada Customer Service: 800.695.8560

### Technical Services

techservicereps@vollrathco.com  
Induction Products: 800.825.6036  
Countertop Warming Products: 800.354.1970  
All Other Products: 800.628.0832